

<u>Reset SS-xxx / ST-xxx / SV-xxx to factory default parameters using IP-001</u> <u>and HyperTerminal</u>

<u>STEP 1</u>

Connect IP-001 to the streamer to be recovered with factorty default parameters (see figure 1)

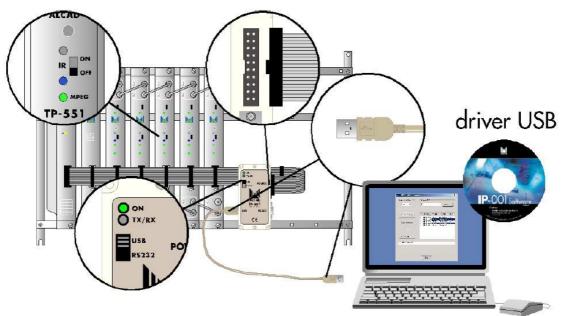


Figure 1. Connection of IP-001

Important: only streamers to be recovered would be connected to 20 pin cable

STEP 2

Open HyperTerminal software Putty (<u>http://www.putty.org/</u>) and configure the Serial connection to access to IP-001

Save a "Session" with the following parameters:

- Name: Connection IP-001
- Type: Serial

Session/Serial parameters:

- COM: select the one that is assigned by Windows to USB driver
- Speed: 9600
- Data bits: 8
- Stop bits: 1
- Parity: Even
- Flow control: None



Load "Connection IP-001" and Open it

STEP 3

Wait until prompt appears (SS-201> or something like that) and type **restore**

After a few minutes the streamer would be restored with factory default parameters